

231-210

Instructions

Mirror

Creative Interiors


A DIVISION OF THOMASVILLE FURNITURE INDUSTRIES, INC.




Touch Up Pen
80085010

1

* Screw (3) cam studs into the holes, as shown, in cap molding.

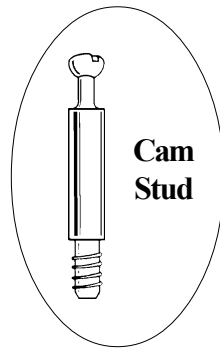

Cam Stud

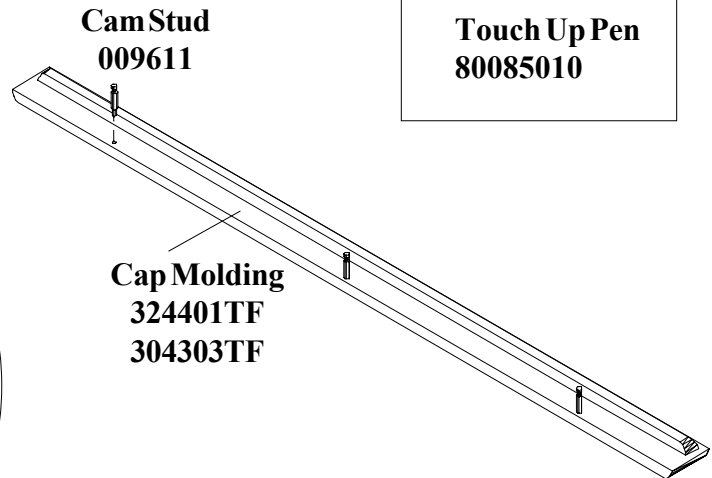

Cam Stud
009611

Cap Molding
324401TF
304303TF

2

* Carefully with a helper, place mirror on its front, preferably on carpet or a soft surface.
* **SEE FIGURE 1**...Insert (3) cam housings into the holes, as shown, in back of mirror.


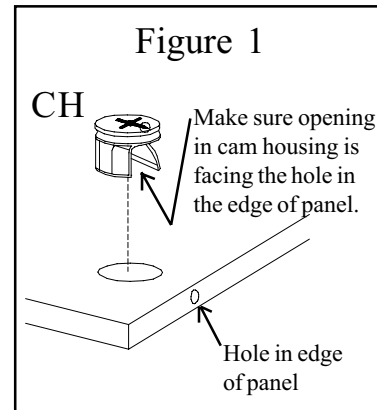


Figure 1

CH

Make sure opening in cam housing is facing the hole in the edge of panel.

Hole in edge of panel


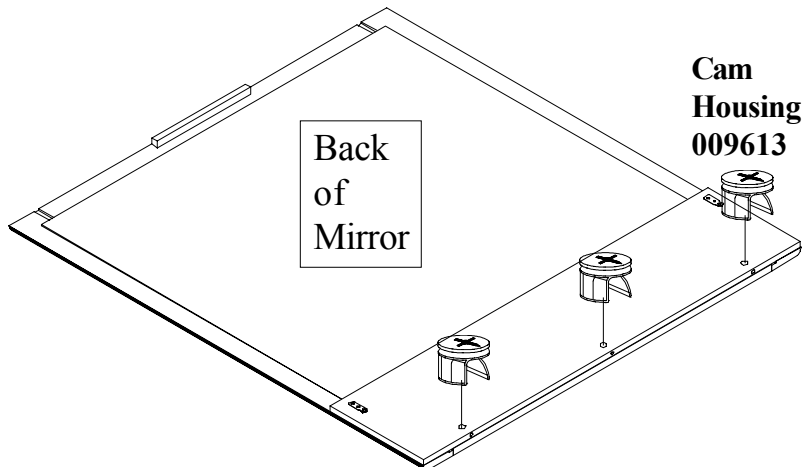


Back of Mirror

Cam Housing
009613

3

- * Attach cap molding. **finished edge down**, to mirror.
- * Lock cam housings with a half turn clockwise of a standard flat-head screwdriver.

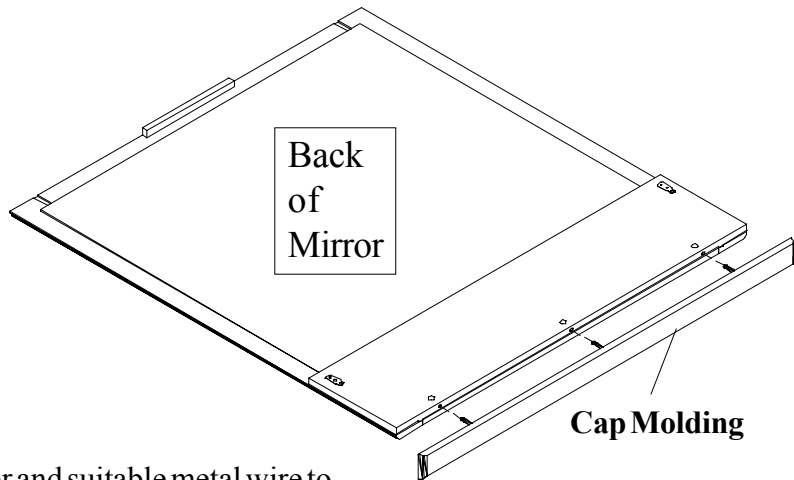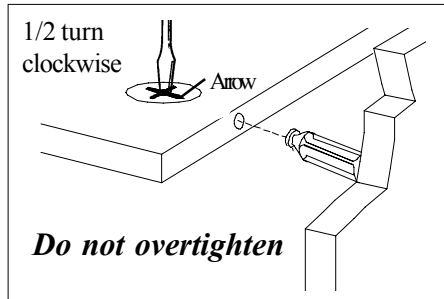

INSTALLATION

Use the tabs on the back of the mirror and suitable metal wire to hang your mirror.

MIRROR CARE

To insure your mirror stays beautiful, may we offer a few suggestions.

Lightly dust the frame surface as needed with a clean, lint-free absorbent cloth.

When cleaning is required, wipe frame surface with a soft, damp cloth.

If additional protection is desired, use a spray furniture polish.

In most active families, furniture occasionally receives scratches and nicks. Small mars and scratches on the frame can be touched up with a furniture touch-up pen which has been provided.

The mirror surface can be cleaned with household glass or window cleaning products and a soft, lint-free cloth.

CREATIVE INTERIORS QUALITY

Creative Interiors ready-to-assemble furniture is easy to put together. Just follow these step-by-step instructions carefully, and you will have furniture that is both attractive and functional.

The Creative Interiors name is your assurance of quality. If you have any questions about your new furniture, just call 1-800-RTA-FURN

(1-800-782-3876) between 8:00a.m. - 9:00 p.m. (Eastern Time), Monday through Friday.

Important:

Have the 1" x 3-1/2"

date-code sticker found on the side of the box and the assembly instructions handy when you call.

MRP # 80102900

0104